

## WARRANTY

- 5-year warranty replacement warranty will be provided during the warranty period if the lamp suffers quality problems.
- During the warranty period, the customer shall return the damaged goods or failed parts for inspection and repair by NLT Trade. NLT Trade will then send the fixed or new parts back.
- A replacement warranty will be provided once valid documents are presented.

The following circumstances will not receive replacement warranty:

- Damage caused, including, but not limited to, damage from abnormal working conditions, improper usage, storage that does not conform to the instruction manual;
- Dismantling, modification or improper installation or repairing of the products without NLT Trade's authorization;
- Damages caused by environmental circumstances including, but not limited to, fire, flood, lighting strike, earthquake.

## WARNING

To avoid the risk of fire, explosion, or electric shock:

- This product should be installed, inspected, and maintained by a qualified electrician only, in accordance with all applicable electrical codes. (verify power wire is by following per under applicable electrical codes)
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
- The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.

To avoid electric shock:

- Be certain electrical power is OFF before and during installation and maintenance.
- Luminaires must be supplied by a wiring system suitable per local code with an equipment grounding conductor.


To avoid burning hands:

- Before to performing maintenance, ensure Luminaire is allowed to cool after powering off for a period of 30 minutes.

To avoid product degradation:


- Do not operate in ambient temperatures above those indicated on the luminaire data sheet.
- Use proper supply wiring as specified on the luminaire data sheet.
- Avoid use in environments containing sulfur, chlorine or other halides, methyl acetate or ethyl acetate, cyanoacrylates, glycol ethers, formaldehyde, or butadiene.
- Mount luminaire no less than 900 mm from the ceiling.
- Make sure the supply voltage is within the voltage range stated on the data sheet.
- Use only replacement parts from NLT Trade.

## PENDANT EYEBOLT MOUNTING

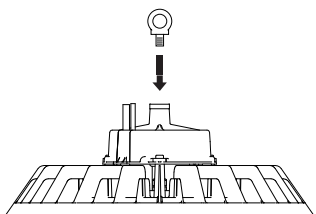

### STEP 1

Thread the enclosed eyebolt hook into the top of the luminaire housing, and tighten securely. Tighten the set screw to prevent the eyebolt from loosening.

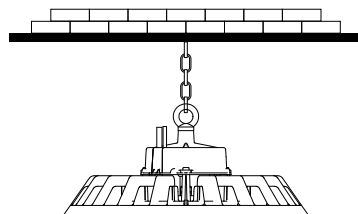

### STEP 2


Use a chain, cable, mounting hook, or other suitable mounting hardware to hang the light fixture. Make sure the hardware is securely fastened to a stable structure and has enough strength to safely support the weight of the fixture.

### STEP 3

Refer to the wiring diagram to make electrical connections.




## CEILING MOUNTING

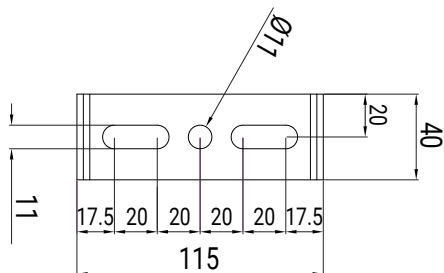


### STEP 1

Punch M10 screw holes in the ceiling according to the bracket's holes.

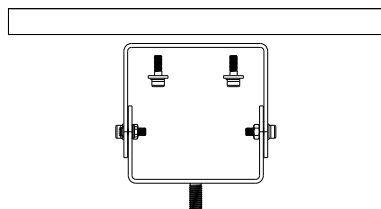


### STEP 2

Align the bracket with the screw hole, then tighten the screw to secure the bracket in place.

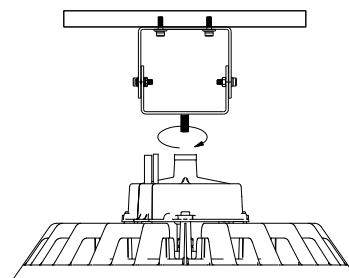


### STEP 3

Position the hole at the top of the lamp over the bottom of the bracket and tighten the screws to secure the lamp in place.

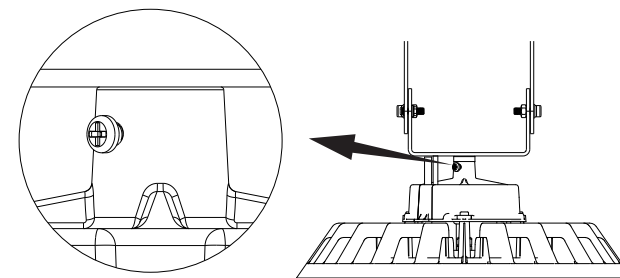

### STEP 4

Finally, tighten all screws in this position to complete the installation.

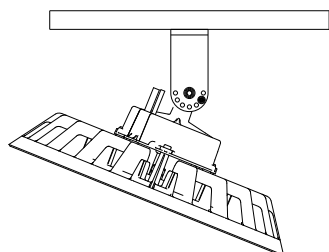

### STEP 5

To adjust the angle of the lamp, unscrew the screw and make any necessary adjustments.



## REFER TO THE WIRING DIAGRAM TO MAKE ELECTRICAL CONNECTIONS

**Connecting the cable requires an IP65 Tightness level**

